


## Material List:

- (1) Piece 3/4" plywood at least 1-1/8" longer and 2" wider than the mailing envelope.
- (1) Piece stencil plastic at least 1-3/4" longer and the same width as the mailing envelope.
- (1) Piece 1/2" diameter x 10" long wooden dowel

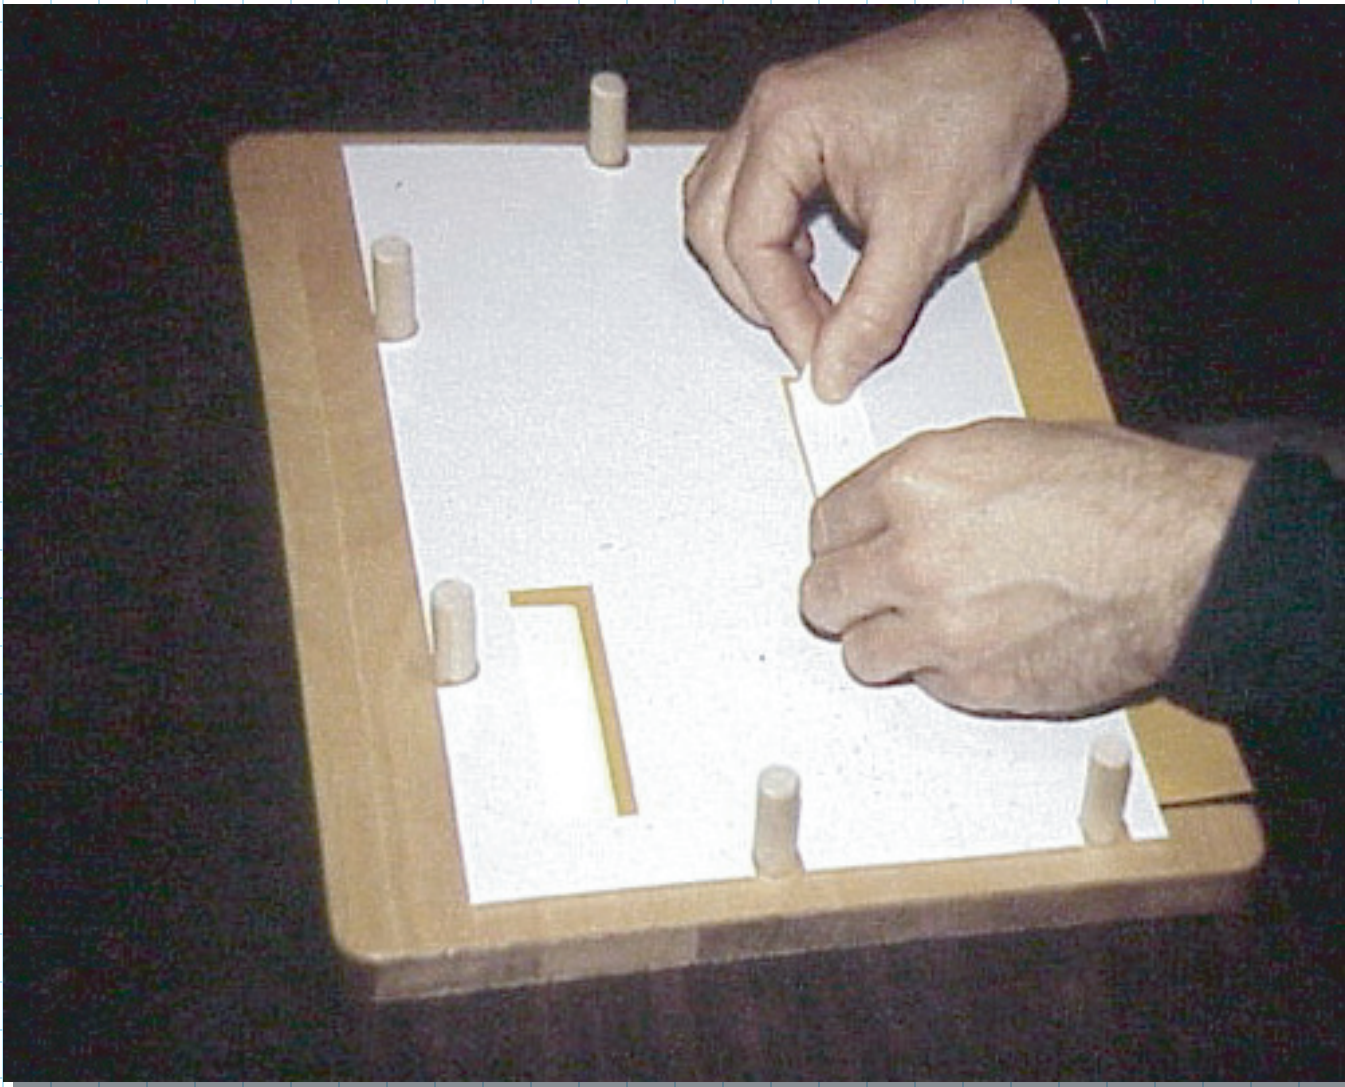


## Instructions:

- 1. Slide envelope between stencil sheet and base.
- 2. Place labels in 'windows' of stencil sheet.
- 3. Remove envelope.

## Assembly Instructions:

- 1. Obtain materials listed.
- 2. Fabricate applicator base per sheet 2.
- 3. Fabricate stencil per sheet 3.
- 4. Cut (6) 1-1/2" x 1/2" diameter dowels as shown on sheet 3.
- 5. Glue dowels into holes in base
- 6. Attach stencil over dowels

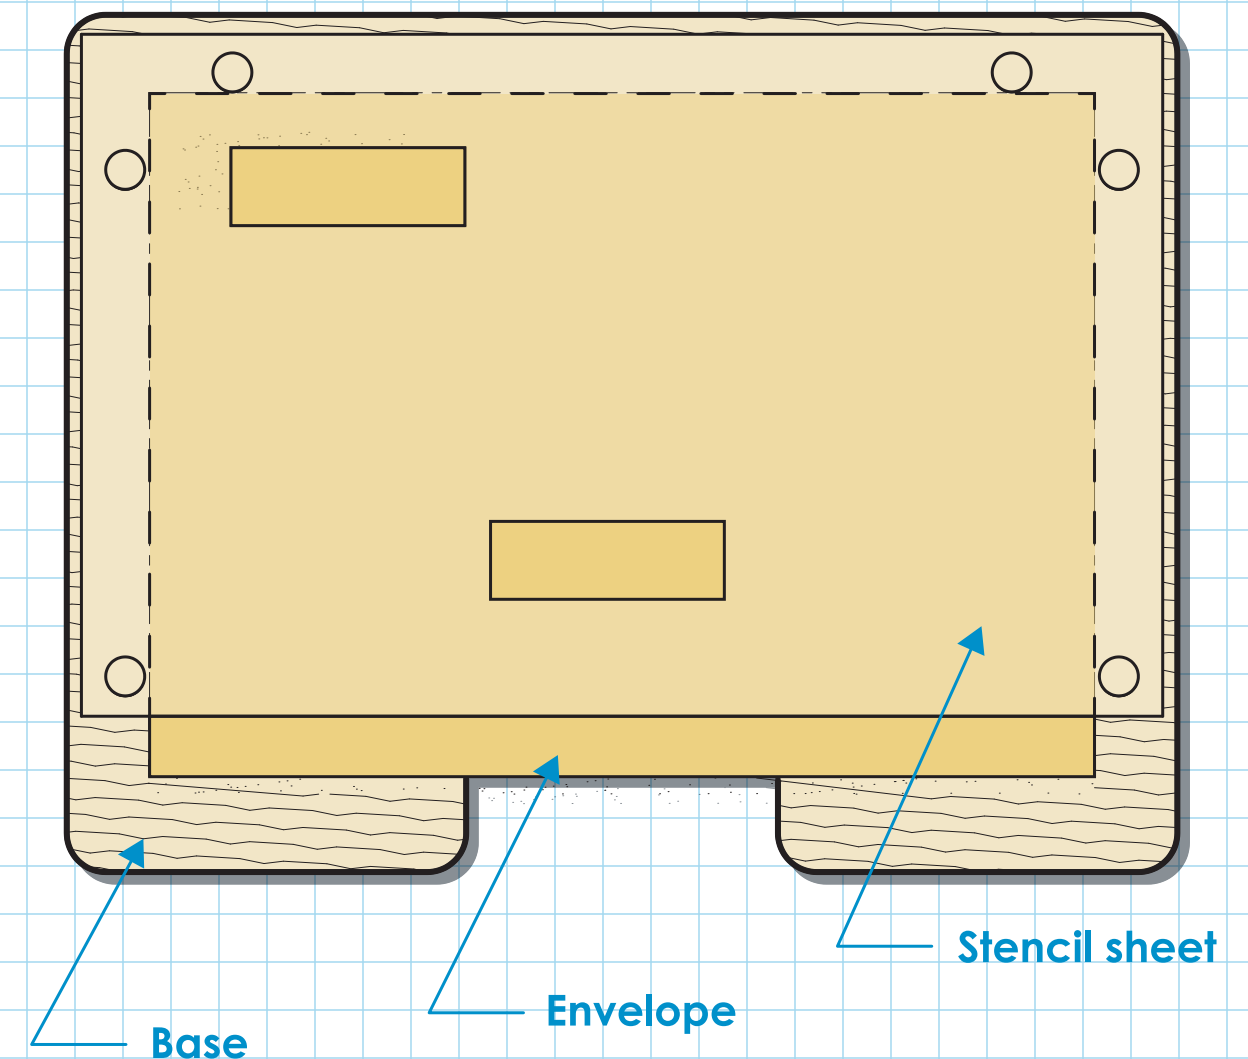

Project Name: Label Applicator

Drawing Name: Photo and Instructions




Submitted By: J. Weisman

Scale: Not to scale

Date: 11.4.13

Sheet #: 1/2

Rev: A

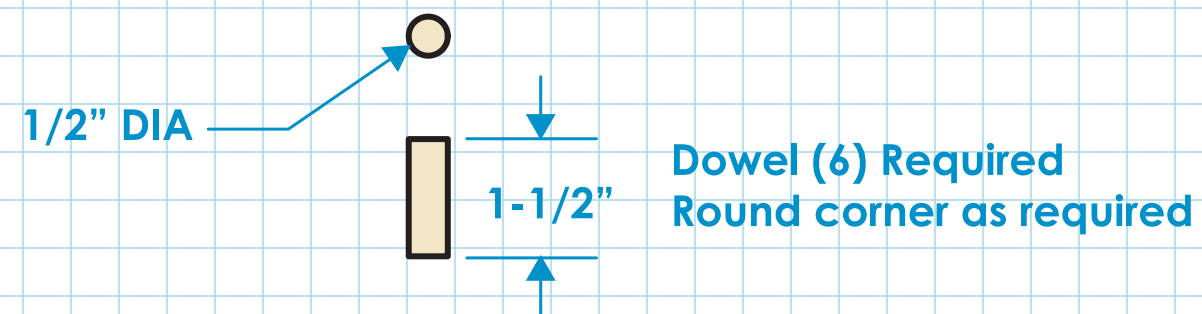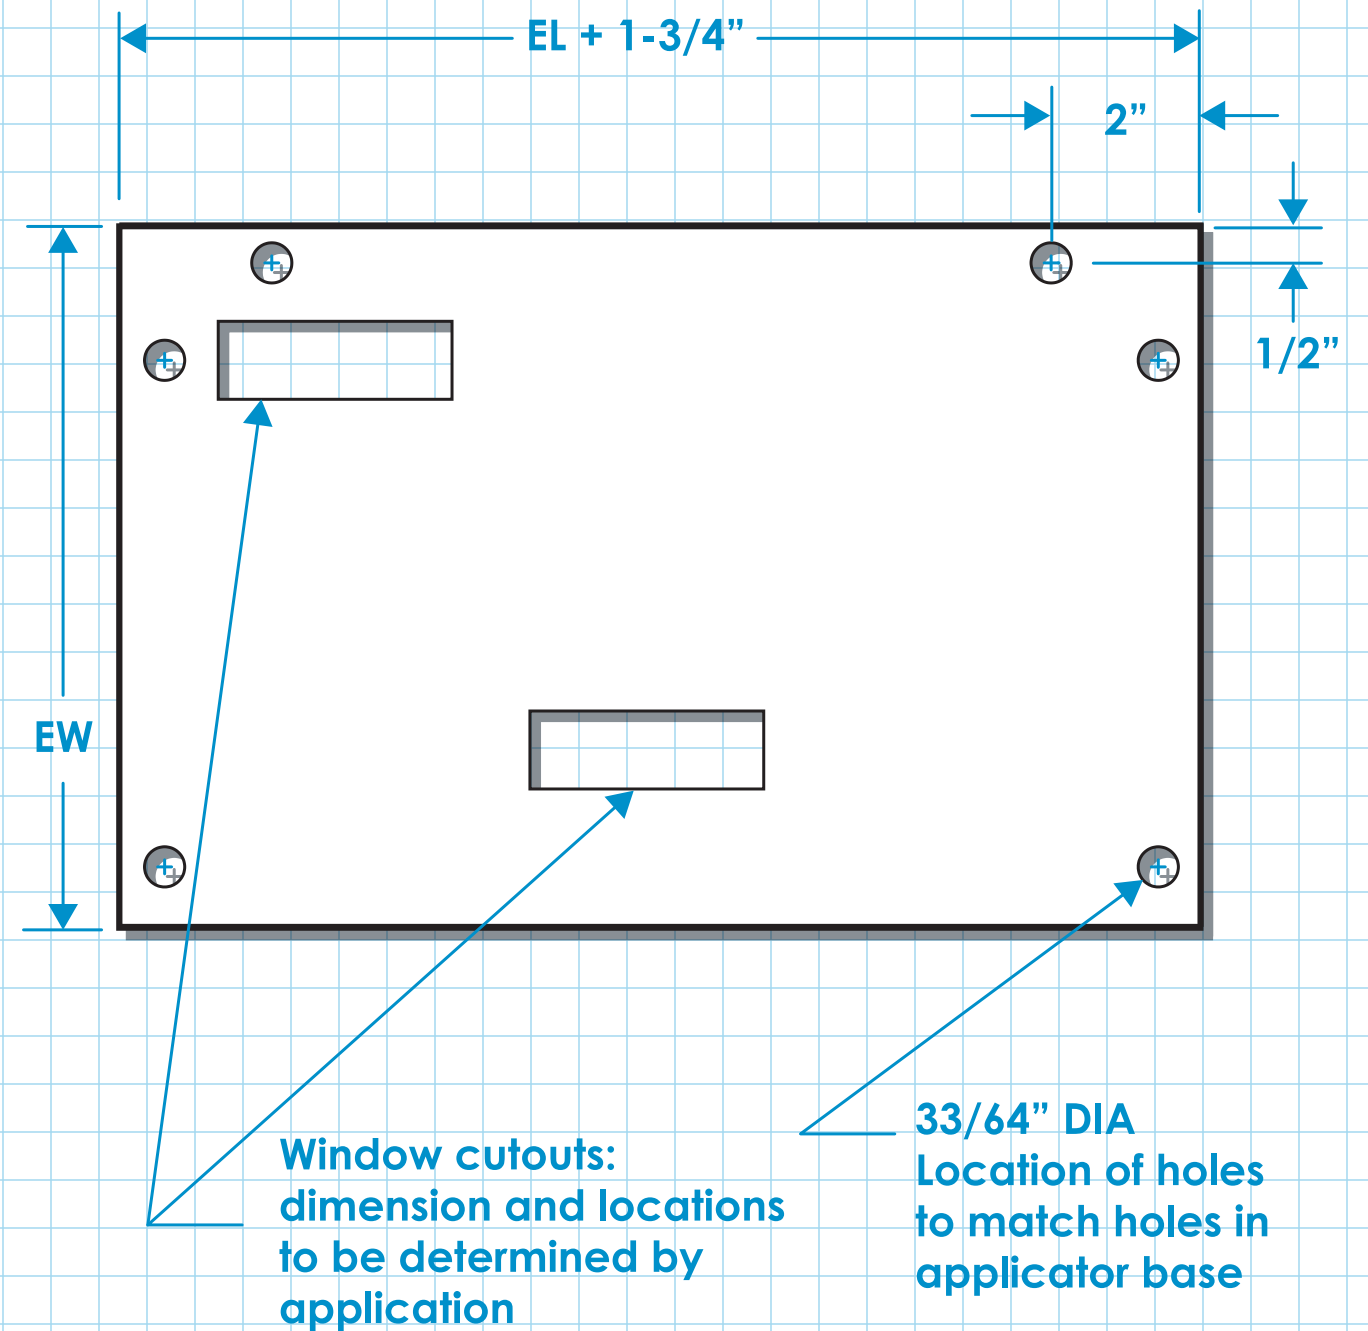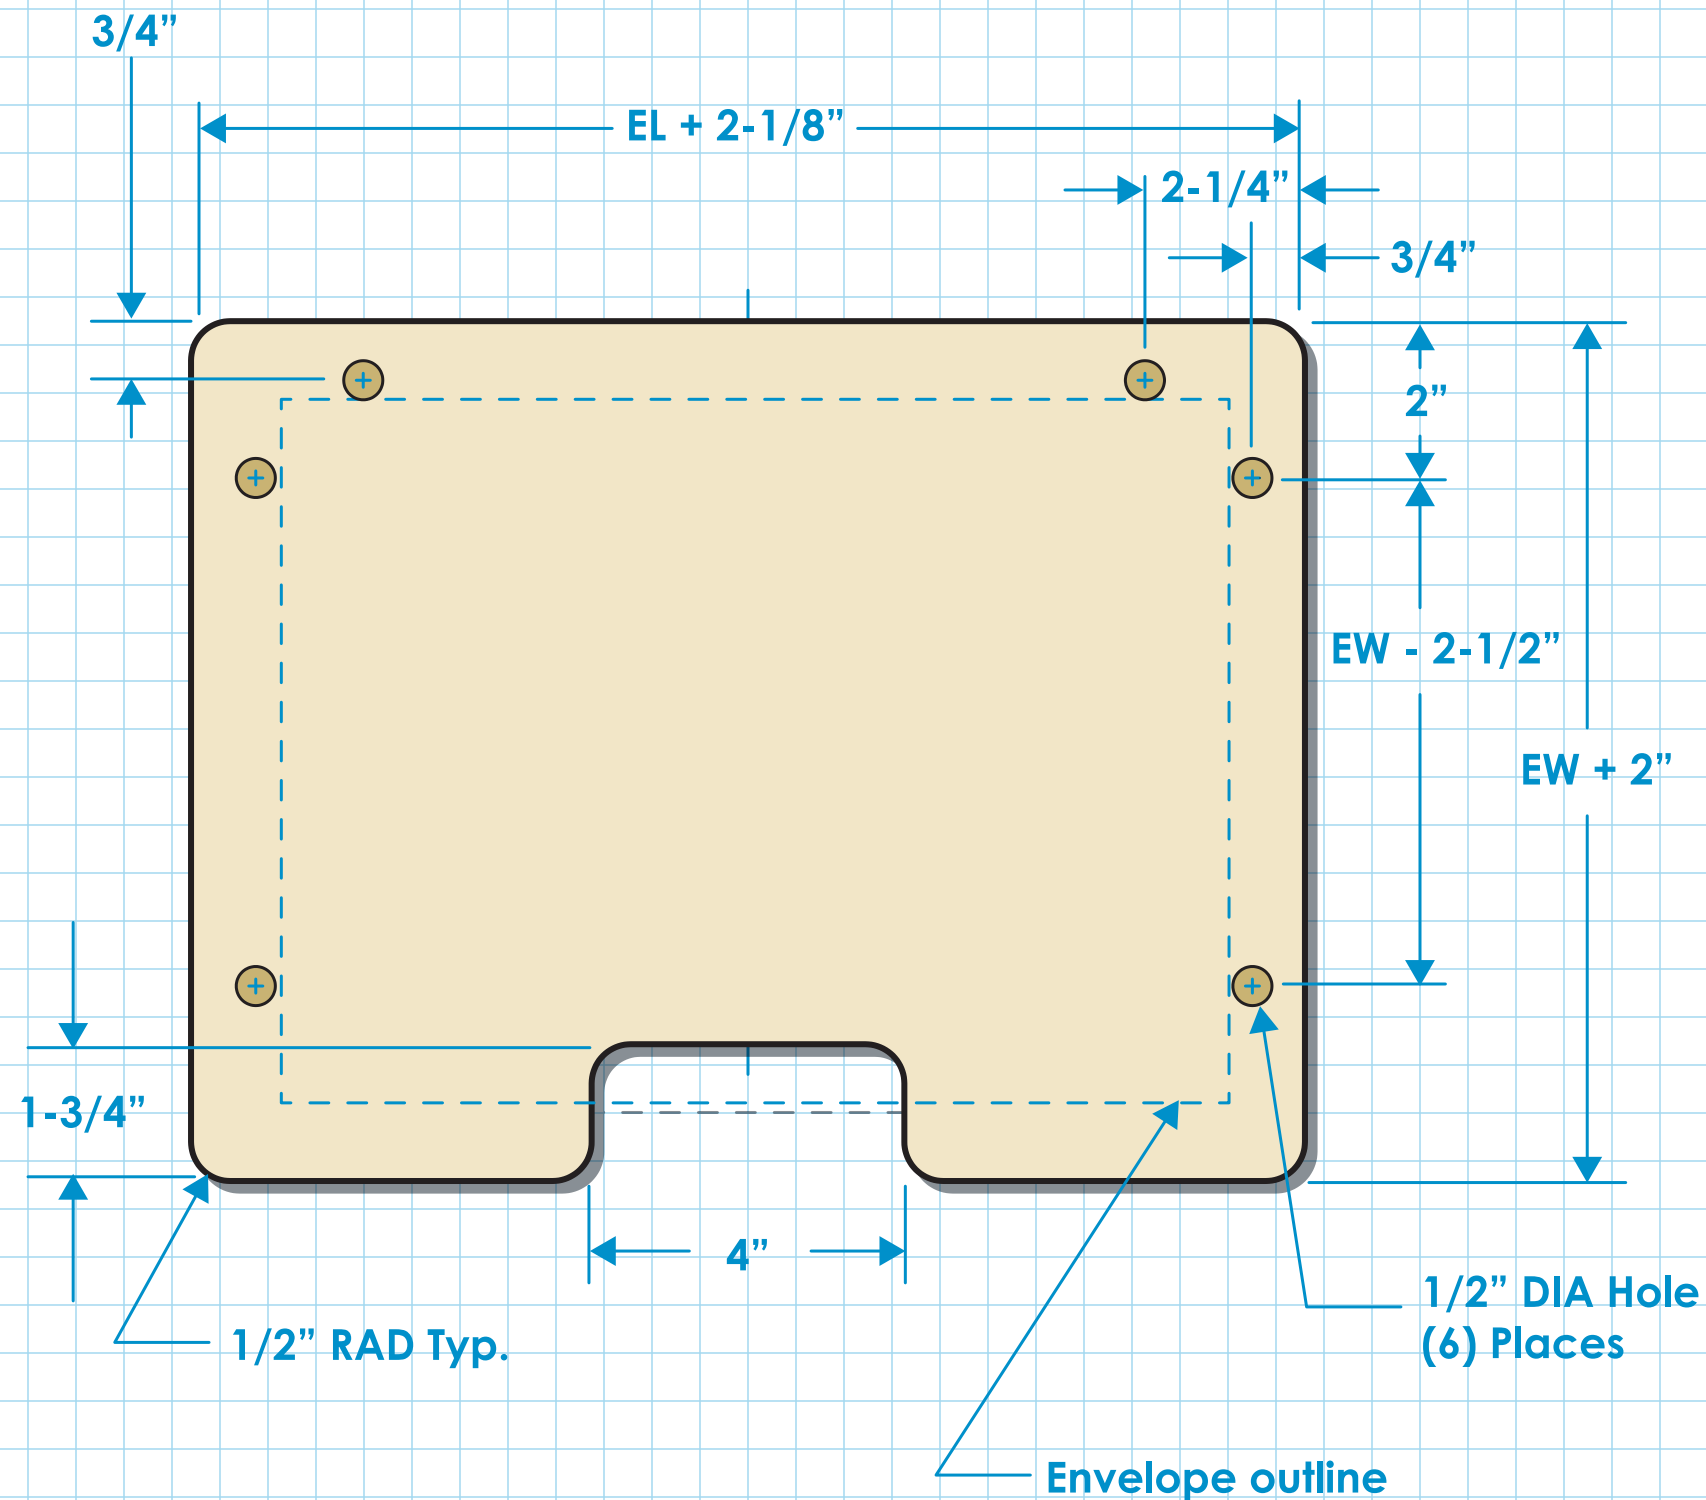

Project Name: Label Applicator

Drawing Name: Applicator Details

Submitted By: J. Weisman

Scale: Not to scale

Date: 11.4.13

Sheet #: 2/2

Rev: A